2.3 CONTROL PANEL SECTION

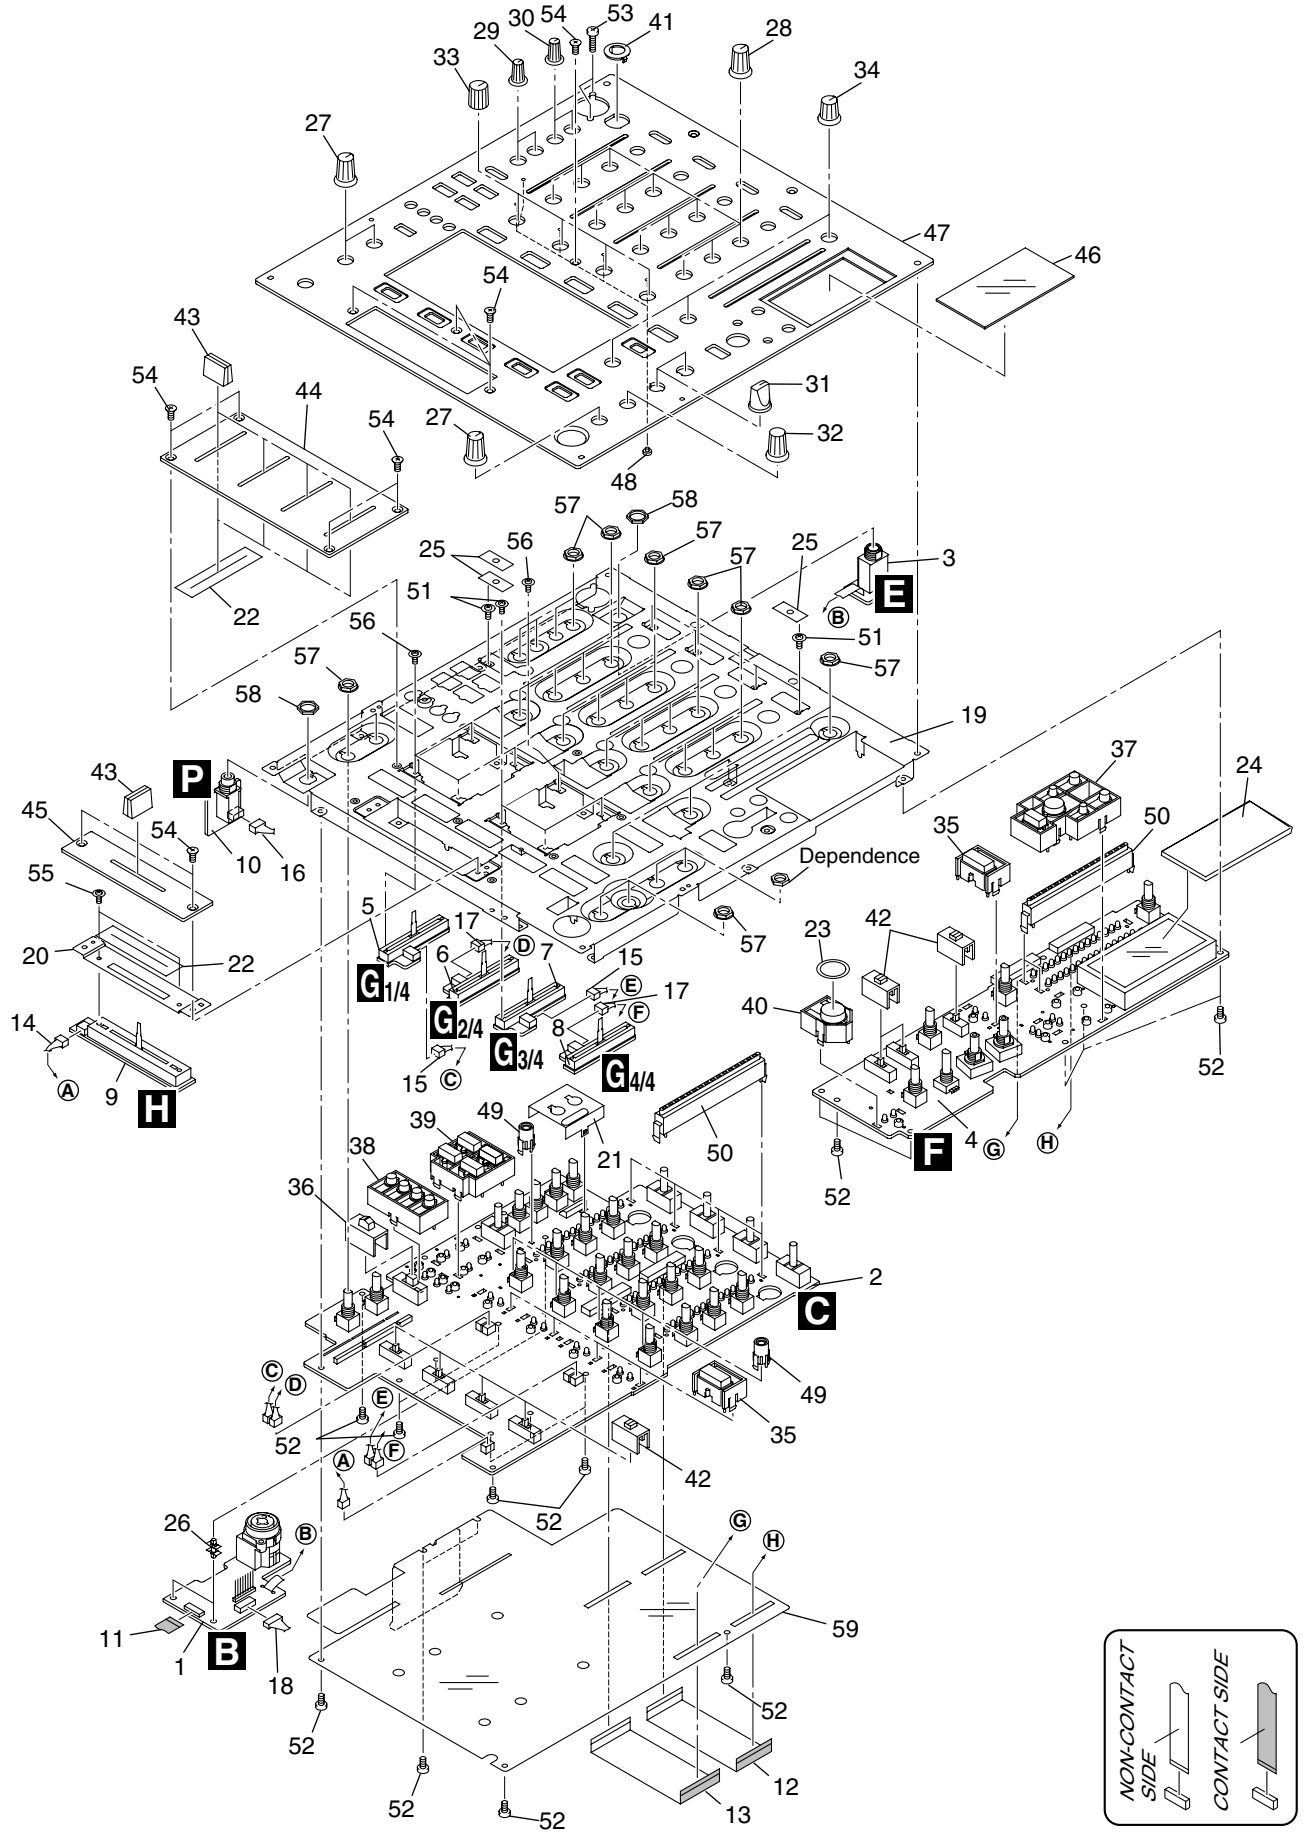

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MIC 1 Assy	DWX2542
	2	PANEL 1 Assy	DWX2552
	3	MIC 2 Assy	DWX2543
	4	PANEL 2 Assy	DWX2554
	5	CHFD 1 Assy	DWX2537
	6	CHFD 2 Assy	DWX2538
	7	CHFD 3 Assy	DWX2539
	8	CHFD 4 Assy	DWX2540
	9	CRSFD Assy	DWX2541
	10	HP JACK Assy	DWX2553
	11	Flexible Cable (12P)	DDD1320
	12	Flexible Cable (27P)	DDD1324
	13	Flexible Cable (30P)	DDD1325
	14	Housing Wire Assy	PF03PP-D12
	15	Housing Wire Assy	PF04PP-D05
	16	Housing Wire Assy	PF04PP-D20
	17	Housing Wire Assy	PF04PP4D05
	18	Housing Wire Assy	PF05FF-D25
NSP	19	Panel Stay	DND1254
	20	CRF Stay	DNF1726
	21	MIC Stay	DNF1727
	22	Fader Packing	DEC2903
	23	SW Packing	DEC2929
	24	Barrier (FL)	DEC2943
	25	SW Packing	DED1177
NSP	26	PC Support	VEC1508
	27	Rotary SW Knob (A)	DAA1175
	28	Rotary SW Knob (B)	DAA1176
	29	Rotary SW Knob S (A)	DAA1177
	30	Rotary SW Knob S (B)	DAA1178
	31	Select Knob	DAA1205
	32	Rotary SW Knob (C)	DAA1180
	33	Rotary SW Knob (HM)	DAA1197
	34	Rotary SW Knob (MA)	DAA1198
	35	CUE Knob	DAC2215
	36	Slide SW Cap (A)	DAC2219
	37	SET Knob (TAP)	DAC2300
	38	SET Knob (FS)	DAC2301
	39	SET Knob (HM)	DAC2302
	40	EFFECT Knob	DAC2304
	41	MIC Cap	DAC2309
	42	Slide SW Cap	DAC2310
	43	Slider Knob (L2)	DAC2371
	44	CHF Panel	DAH2426
	45	CRF Panel	DAH2427
	46	Disply Panel	DAH2428
	47	Control Panel	DNB1144
	48	LENS	DNK4532
	49	LENS Holder	DNK4533
	50	LEVEL Meter Assy	DXB1882
	51	Screw	AMZ26P040FTC
	52	Screw	BBZ30P060FTB
	53	Screw	BPZ30P120FTB
	54	Screw	CCZ30P060FTB
	55	Screw	DBA1262
	56	Screw	DBA1298
	57	Flange Nut M9	DBN1008
	58	Nut	NKX2FTC